



Hanging Instructions: 870 Reclaimed Pine Wood Shelf




1. The corbels that came with your reclaimed pine shelf have been preassembled in the factory and then labeled for shipment. First lay the corbels so that you can see the numbers and outline on the back.

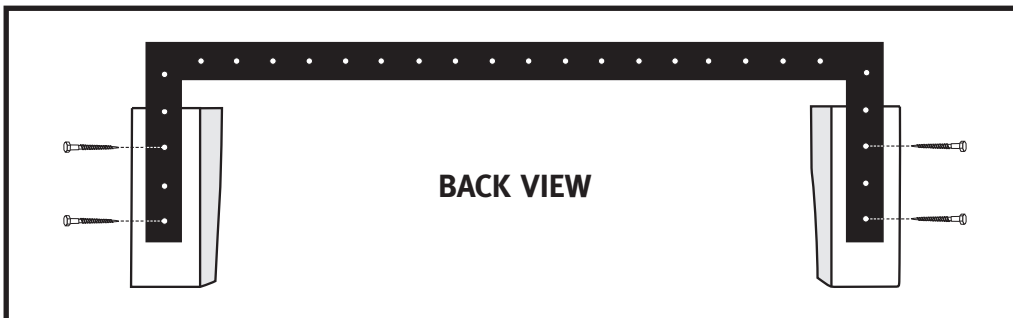

2. Next take the metal bracket that is labeled with the corresponding numbers to the bracket and match them up. Use the provided screws to attach the corbels to the metal bracket.

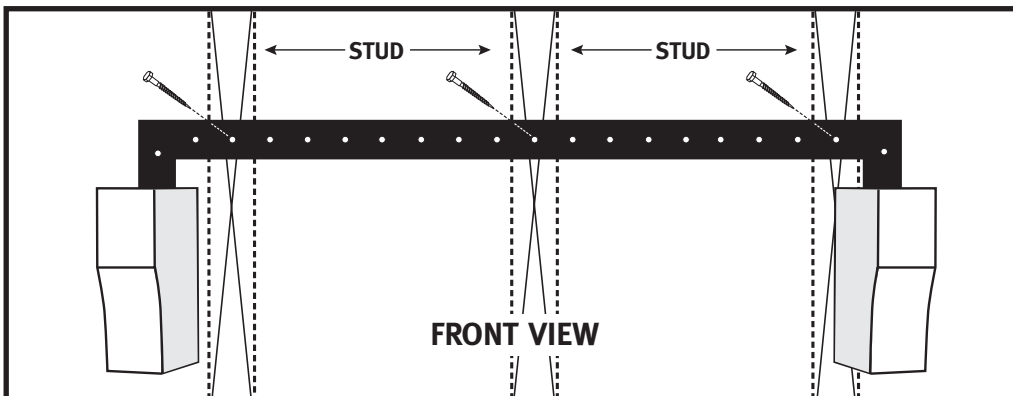

3. Next locate studs on the wall to attach the metal bracket. Hole spacing on the bracket is every 2" and should accommodate most situations. If you are not sure of the best way to attach to the wall securely please contact a local contractor to perform the installation for you.

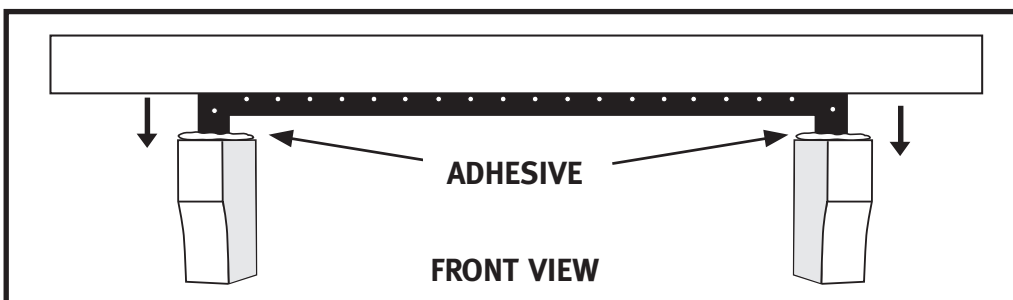

4. Lay the pine shelf on top of the corbels and affix with construction adhesive.